


DREIKUGEL-SICHERHEITSSYSTEM INNENSPIEGEL

Wenn Sie einen Spiegelmonitor, mit einem universellen Halter für die Windschutzscheibe verbauen, befestigen Sie zunächst den universellen Halter an Ihrem Spiegelmonitor. Danach befestigen Sie die universellen Adapter an der Windschutzscheibe. Montieren Sie dann den Spiegelmonitor an der Windschutzscheibe.

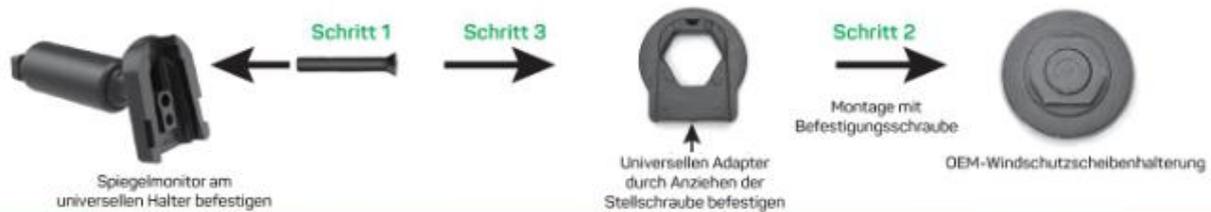

FAHRZEUGSPEZIFISCHE ADAPTER

Universelle Adapter sind für die meisten Fahrzeugmodelle erhältlich. Mit diesen Adaptern können Sie den Spiegelmonitor ohne Änderungen an der Werkhalterung verwenden. Kontaktieren Sie unseren Support für weitere Informationen.

Honda



Volkswagen



Renault



Fiat



BMW, Dodge Range Rover




Mercedes



TRI-LOBE TYPE MIRROR MOUNT

If you have a vehicle with a Tri-Lobe Mount, first attach the #35 tri-lobe adapter to the mount on the Windshield. Next attach the Mirror Mount to the Tri-lobe adapter.

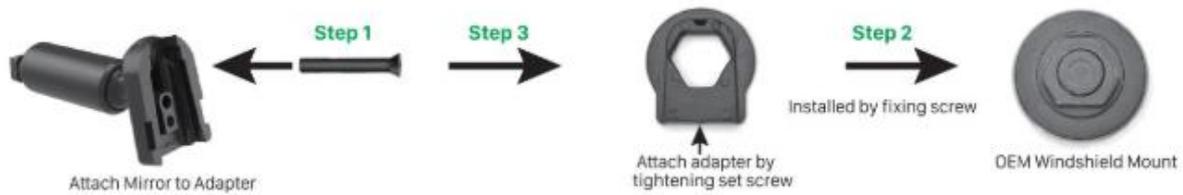


VEHICLE SPECIFIC ADAPTERS

Adapter Mounts are available for most models of cars. These adapters allow you to use the mirror with no modification to the factory bracket. Contact us for more information.

adapter — Most Honda



adapter — Most Volkswagen

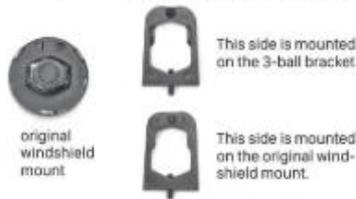

adapter — Most Renault



adapter — Most Fiat



adapter — Most BMW, Dodge Range Rover



adapter — Most Benz

